
WALK IN CLOSET







Fix the first vertical profile to the wall.

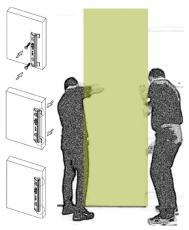

Put clip on the first panel and attach to the panel the second vertical profile.

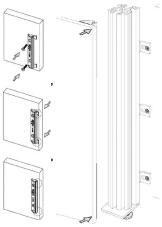


Clip the panel to the first profile, and fix the second profile to the wall.

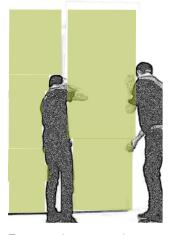


Repeat the operation for all the panels of your walk in closet application.




Once all the panels are fixed proceed with the front and height adjustments.

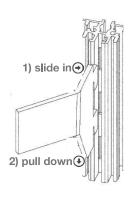


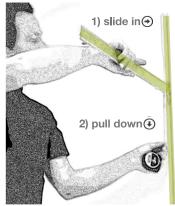

Install the shelves and the cabinets. Slide the shelf support in the hole of the vertical profile. Pull down the shelf support for fix with the vertical profile.


VERTICAL ALUMINIUM RACK PROFILE WITH 4MM GAP

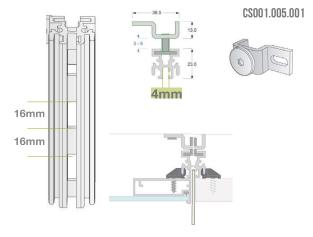

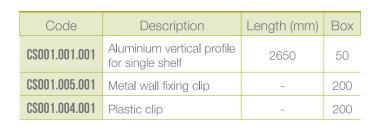




VERTICAL ALUMINIUM RACK PROFILE WITH 9MM GAP

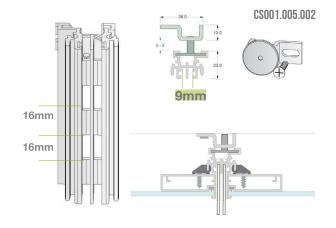

Code	Description	Length (mm)	Вох
CS001.001.002	Aluminium vertical profile for double shelf	2650	50
CS001.005.002	Metal wall fixing clip	-	200
CS001.004.001	Plastic clip	-	200




VERTICAL ALUMINIUM PROFILE FOR BOISERIE WITHOUT BACK PANELS

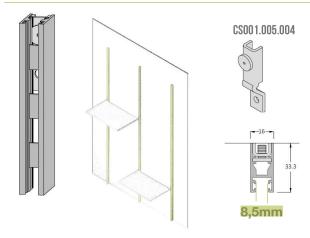


Code	Description	Length (mm)	Вох
CS001.001.005	Aluminium vertical profile for double shelf	2650	50
CS001.005.004	Metal wall fixing clip	-	200


CONNECTOR AND SHELF BRACKET FOR CORNER UNIT

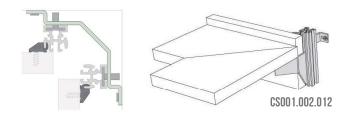


Code	Description	Length (mm)	Box
CS001.005.003	Metal fixing plate for corner units	-	50
CS001.002.012	Shelf support for corner application	60	50



SHELF BRACKETS WITH LUG

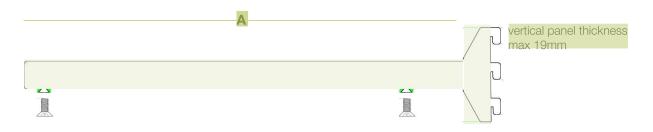

LEFT SHELF BRACKETS WITH LUG

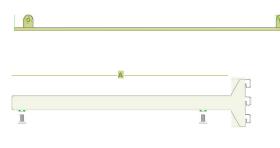

Code	Type	A (mm)	Panel Thick (mm)	Finishing	Вох
CS001.002.017	left	400	25	Grey	50
CS001.002.018	left	300	25	Grey	50
CS001.002.020	left	400	18	Grey	50
CS001.002.019	left	300	18	Grey	50

RIGHT SHELF BRACKETS WITH LUG



Code	Туре	A (mm)	A (mm) Panel Thick (mm)		Box
CS001.002.013	right	400	25	Grey	50
CS001.002.015	right	300	25	Grey	50
CS001.002.016	right	400	18	Grey	50
CS001.002.014	right	300	18	Grey	50


CENTRAL SHELF BRACKETS WITH LUG




Code	Туре	A (mm)	Panel Thick (mm)	Finishing	Вох
CS001.002.021	central	400	25	Grey	50
CS001.002.024	central	300	25	Grey	50
CS001.002.022	central	400	18	Grey	50
CS001.002.023	central	300	18	Grey	50

CABINET BRACKETS

Code	Туре	Height (mm)	Finishing	Вох
CS001.003.004	Right	54	Grey	50
CS001.003.005	Left	54	Grey	50

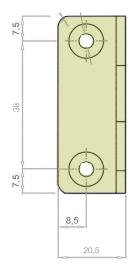

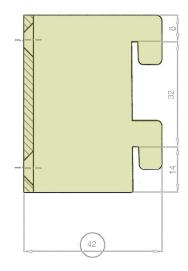





CABINET BRACKET LENGTH 500MM

Code	Length (mm)	Height (mm)	Finishing	Вох
CS001.003.003	500	96	Grey	50

